


## NATIONAL SURGICAL CORPORATION

## Instructions for installing wall mounted shelves


It is recommended that installation is undertaken by a professional carpenter or hospital maintenance personnel.

Installation will require 2 personnel

- 1. Locate where the studs are on the wall. Your maintenance person should have an understanding or drawing of where this is. You can also locate the studs by sliding an electronic sensor along the wall until you hear a beep or see a red line
- 2. Hold up the wall mounted shelf with its brackets attached to the position you require. Another person should find the mounting holes on the brackets and mark these locations on the wall with a pencil

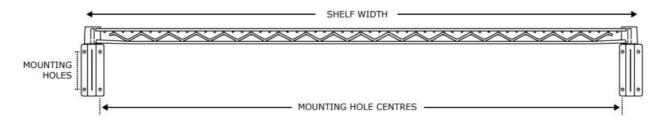

- 3. Remove shelf and brackets. Hold up one bracket in the correct position, making sure that the bracket mounting holes are placed on the markings. Screw the brackets to the wall in each of the mounting holes. Repeat this with the other bracket on the other side
- 4. Once the screws have been installed in the brackets, place the shelf over the top of the brackets, making sure that the shelf circular holes are placed over the bracket lugs at each end. Once these are in place, your shelf is ready to be used

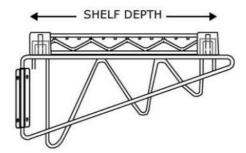

ABN: 36 141 239 567



