

NSC Static Shelving Unit - Assembly Instructions

Getting started

- Posts x 4
- Shelves x number required
- Shelf clips (4 per shelf)
- A rubber mallet is ideal but not included in your unit


Before you start:

Determine where you want your shelves positioned - equal distance between each shelf looks better

- Bottom shelf = minimum 250mm from floor (9 rings up)
- The poles are marked at 25mm intervals with double rings at 120mm intervals
- Top shelf = should be aligned with top of post



- Attach shelf clips for bottom shelf - min. 250mm/9 rings up from bottom of post
- Make sure tapered (thinner) side points up
- Push the two pieces together until you hear a click ensuring the clip locks into the post ring

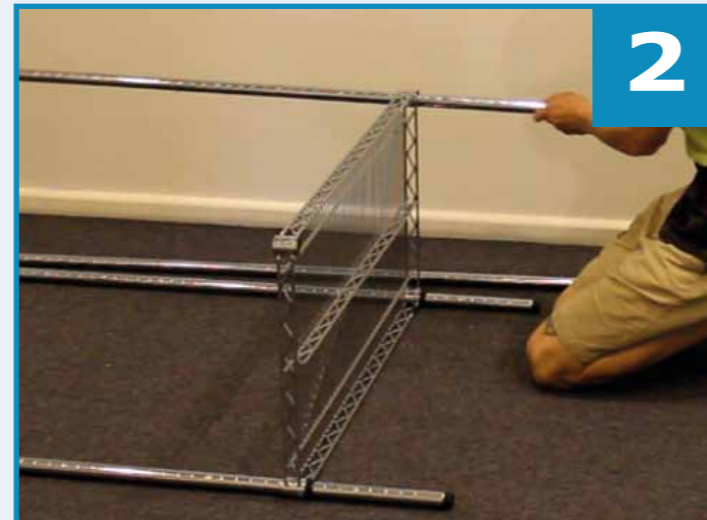

- Slide posts through bottom shelf while horizontal to the ground
- Once all posts are in, pull unit up vertically



- Gently sway unit so that the shelf falls securely over the shelf clips



- Repeat this process with the remaining shelves
- Place the shelf clips at the desired height, making sure you only do one shelf at a time



- Using a rubber mallet tap down shelves evenly at each shelf collar



- Place the shelving unit into position and rotate adjustable legs on bottom of posts until the unit is sitting firm in place



Your shelving unit is ready for use



NATIONAL SURGICAL CORPORATION

Customer Service: 1800 138 138 • www.nationalsurgical.com.au • info@nationalsurgical.com.au